

## Installing the Drinking Water Faucet

**1.** If your kitchen sink does not have an existing 1/2" hole, you will have to drill one. (Refer to How to drill a Hole in Your Sink or Counter-top in our RO User Manual). Wipe clean and dry the area.

### SAMPLE CONNECTION

GA1-HS

Base Plate

Seal O-Ring

Clear Seal O-Ring

Countertop

Rubber Washer

Faucet Stem

Nut

Metal Washer

Locking Clip



Quick Fitting

1/4" Tubing

Insert tubing 1/2 inch deep

**2.** Screw the base plate onto the faucet body. Screw the faucet stem onto the base plate. Insert the faucet stem into the hole on the countertop. Under the sink, insert rubber washer and metal washer, tighten the nut (you may apply a few rounds of Teflon tape to the threads to get a better grip).

**3.** Slide the quick connect fitting up the push-in adapter on the base so that it seats securely into the faucet stem, then lock it in place by sliding the blue clip under the collet. Insert the **BLUE** tubing about 1/2 inch into the push-in fitting, and again, secure it with the blue clip.

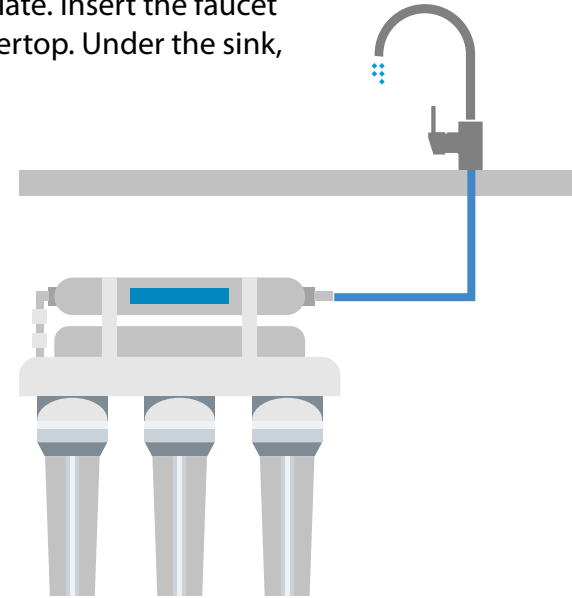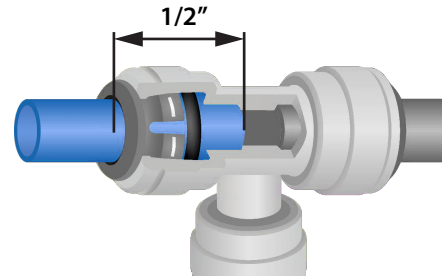

\*To connect, insert the tubing 1/2 inch deep until it's sealed by o-ring and locked by spider teeth.

\*To disconnect, remove blue clip, pull the tubing while pushing down the collet to release the spider teeth.

